
To determine proper liner sizing, one measurement is required:

Step #1: Take circumference measurement 2" (5-6cm) proximal to the distal end of the residual limb.

Note: All TF liners have fabric covers.

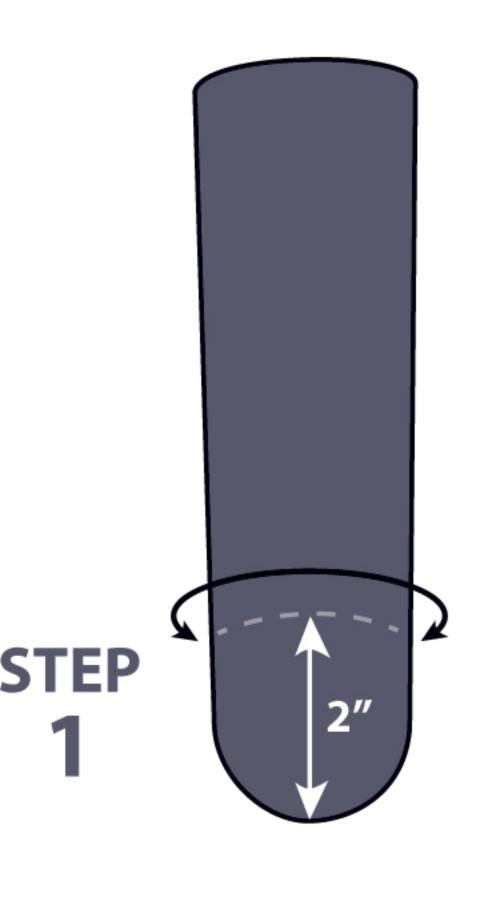

STEP 1: Limb Circ.	Choose Part Number
24 - 28 cm	TF-22 - <b>A</b>
28 - 32 cm	TF-26 - <b>A</b>
32 - 36 cm	TF-30 - A
36 - 40 cm	TF-34 - A
40 -44 cm	TF-38 - <b>A</b>
44 - 48 cm	TF-42 - <b>A</b>
48 - 52 cm	TF-46 - <b>A</b>





Limb Circ. Of 34" and a Lock with Textile.